

ParkSense Fix

Installation Guide

The **Z Automotive ParkSense Fix** corrects the ParkSense error caused by programming the Dodge Ram DT and Ram TRX for larger than standard tires. It is compatible with the following vehicles:

2021-Present

Dodge Ram 1500 DT

2021-Present

Dodge Ram 1500 TRX

What's in the box?



Tools Needed:


- (optional) plastic pry bar

Installation



- Pull or pry up the trim that sits below the driver's side door.
- This will reveal the ParkSense module on the driver's side wall near the pedals.


- Disconnect the nearest plug in the ParkSense Module by depressing the tab and pulling straight down. (A)

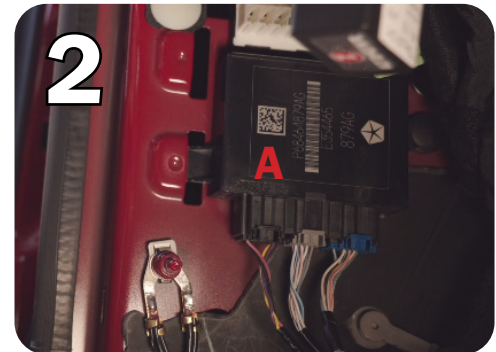

- Connect that plug to the female connector on the kit's wire harness.



- Plug the male connector on the wire harness into the ParkSense module.

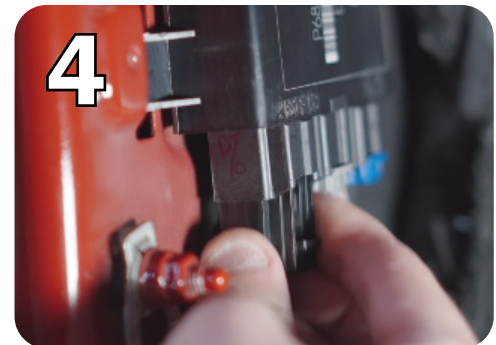

- Connect the ParkSense Fix electronics module to the wire harness.



- Tuck the electronics module out of the way below the ParkSense module.
- Snap the trim that was removed in step 1 back into place and **installation is complete.**

